




#600630 Mini-Z Carbon Fiber Rear Wing Set




Measure the distance between the original spoiler mounting hole on the body. There are measurement marking on the main flap (1mm increment)
 The closet mounting points are 20mm apart while the furthest mounting point are 40mm apart.
 Make the marks accordingly and drill the holes using 2mm drill bit.

Connect the main flap with secondary flap by inserting included center support ribs to the pre-cut slot (3 pieces)


2

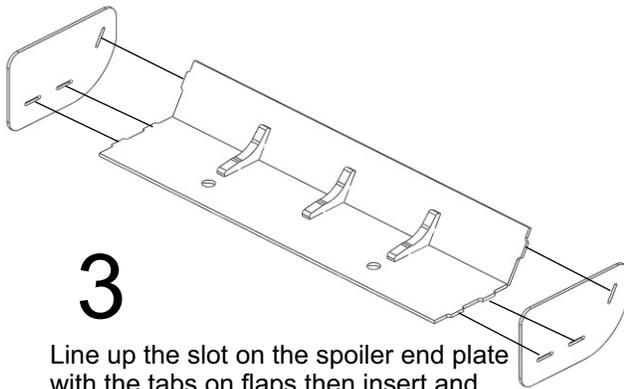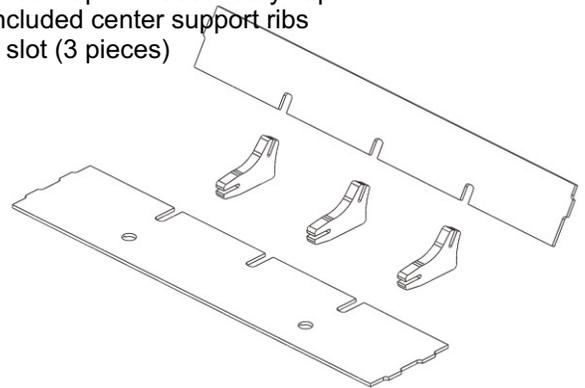

Line up the slot on the spoiler end plate with the tabs on flaps then insert and connect them together

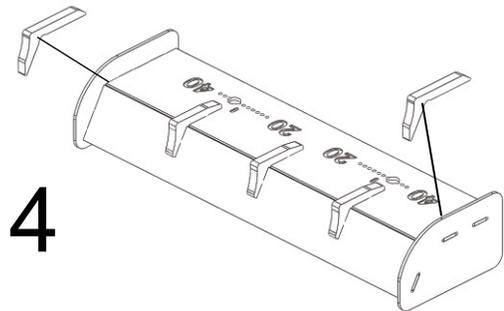

Place and glue (CA glue) the side support ribs (2 pieces) on bottom side of the flaps (making sure the support ribs are contacting the end plate)

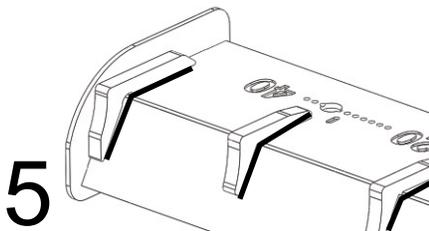

Apply small amount of CA glue on the edge of the 3 center support ribs and allow it to dry.

Required
 ~ CA Glue
 ~ 2mm Drill Bit

